

X273



Contents

Welcome	3	Connect to	
Phone layout.....	4	Bluetooth Devices	15
Insert SIM and		Secure your Phone	16
Memory Card.....	5	Privacy for	
Switch Phone		messages,	
ON/OFF.....	8	phonebook, call	
Charging your		logs... ..	16
phone	8	Fixed dialing No.....	17
Make a call.....	9	Choose Phone	
Answer a Call	10	Language	17
Hold a Call			
Conference	10		
Swap a Call.....	11		
Record a Call.....	11		
Make an			
International Call	11		
Messaging	12		
LED Flashlight.....	12		
Listen to Music	12		
Listen to FM Radio.....	13		
Record Videos.....	13		
Take Photos.....	14		
Video Player	14		

Welcome

Thank you for your purchase! The Micromax X273 handset provides you with the following rich array of exciting features:

- Dual SIM
- Camera
- Video Recorder
- FM Radio
- Music Player
- Memory card support

Please read this manual carefully to make the full use of its features.

Phone layout



1. Receiver

2.Screen

3.Navigation key

4.OK key

5.Menu Left

6.Menu Right

7.Call key

8.End key

9.Number(0-9)key

10. "*"key

11. "#"key

12.Camera


Insert SIM and Memory Card

You can use your phone with one or two SIM cards inserted.

Slide down the back cover to insert SIM(s) and battery as shown below:




1

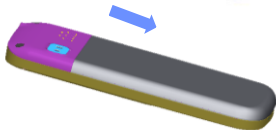


2

Remove the battery and insert the SIM(s) in the slots as shown below:

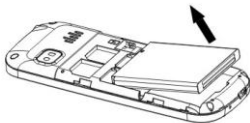


3



4

Remove the memory card following the above 3 steps. Insert the memory card in the slot provided. Please refer the image below:

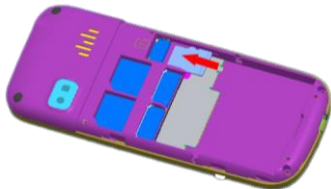

Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.



Please charge the battery before you use the newly purchased

phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

Switch Phone ON/OFF

- To switch ON your phone, press and hold the **End key** for a few seconds.
- To turn OFF your phone, press and hold down the **End key** for a few seconds.

If the phone lock has already active in the phone's security settings, you need to enter the 4-digit password to unlock the phone. (The preset unlock code is 0000.)



Warning: If you enter a wrong PIN code three times in a row, the SIM card will be locked and you need to enter the PUK code to unlock it. In this case, you need to contact your network provider for the PIN and PUK code.

Charging your phone

To charge your phone insert the given charger in the slot provided for charging and connect to a switch. Please refer the image below:



Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the **Call key**.
- Go to **Menu> Phonebook** and then select and dial the desired number.

Answer a Call

Press the **Answer** key to answer a call.

Hold a Call Conference

While on a call, press Keypad, then dial a number or select a contact. The first call is put on hold.



After this, press Merge calls and your Conference is set up.

Swap a Call

- While on 2 calls, press Swap to swap calls.

Record a Call

While on a call, press Record to record a call.

Mute

To mute the call, press Mute while on call.

Speaker

To put the call on speaker, press H-free.

Make an International Call

- Press the * key more than once till “+” appears on the screen.
- Enter the country code, area code and phone number, and press the dial key.

For example, to dial a number in France, press and hold the 0 key (until the

“+” sign appears), input 33 (French code) and then enter the complete phone number.

Messaging

Menu > Messages

You can read messages and compose/send messages. You can forward, delete, back up or delete selected messages and so on. You can read messages in the Draft, outbox, sent, messages folder and so on.

LED Flashlight

Menu > Applications> Flashlight

Press hold the navigation key with torch indicted to turn on/off the Flashlight.

Listen to Music

Menu > Multimedia> Music

The Micromax X273 comes with an inbuilt music player that plays all your favorite music stored in your memory card. It gives you a host of settings to make your listening experience interesting.

Shortcut keys:

- Select Music player from the Multimedia in the Main Menu.
- Press the middle of the navigation key to play/pause the song.
- Press Left/Right key to change songs
- Press up /down from the navigation key to adjust volume.

Listen to FM Radio

Menu > Multimedia> FM Radio

- Plug the headset into the phone.
- Press up /down from the navigation key to adjust volume.
- Press the middle of the navigation key to start or stop the radio.

Record Videos

Menu > Multimedia > Video recorder

- Press the record key to take videos.
- Press options key for setting preferences.

Take Photos

Menu > Multimedia > Camera

- Press the Capture key to take photos.
- Press options key for setting preferences

Video Player

Menu > Multimedia > Video Player

- Let you play videos stored in your memory card.
- Press up /down from the navigation key to adjust volume.
- Press the middle of the navigation key to start or stop the video.

Image Viewer

Menu > Multimedia > Image Viewer

- Lets you watch images.
- Press the middle of the navigation key to view photos.
- Press Left/right to change images.

Connect to Internet

In order to connect to internet you need a GPRS enable SIM. For this, please contact your service provider.

- To connect Select Network settings from the Settings in the Main Menu and enable GPRS Service.
- You can also adjust the connectivity settings from the Data connection settings and select your network from network selection.
- After connecting, select WAP from connectivity.
- Input the desired URL and you are ready to explore the internet

Connect to Bluetooth Devices

Menu > Connectivity > Bluetooth

Your phone enables you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, or talk hands-free.

STK is a SIM toolkit, which provides you services given by your service provider. Please note that these services are chargeable.

Secure your Phone

Menu > Settings> Security > Phone Locked

- Let you lock your phone via a security password, which you can change anytime.
- The default security code to unlock the phone is 0000.

Note: After you activate the phone lock, you will be asked for a password when you power on your phone next time.

Privacy for Messages, Phonebook, Call logs etc.

Menu > Settings> Security settings > Privacy Protection

- Enter the default password 0000 to set the privacy lock.
- Select and enable the desired objects to protect and save the choice.
- Each time you access the protected feature such as messages, you will be asked for the password.

Note: You can also change the default password to a password of your choice. The new password will be required to access the protected objects (messages/phonebook/call logs).

Fixed dialing No.

Menu > Settings> Security settings > Fixed dialing No.

Outgoing calls from your phone can be restricted by making a fixed dialing list that allows only numbers on that list to be dialed from the phone.

Choose Phone Language

Menu > Settings> Phone Settings> Language Settings

You can choose to interact with the phone using the available languages listed under the Select Language option.

Health & Safety Information

Please read the following guidelines regarding the use of your phone. Not following them may be dangerous or illegal.

Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please do not put the phone onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.

During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone or switch to flight mode during a flight.

In Hospitals

Your Phone's radio waves may interfere with the functioning medical devices.

- Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations posted instruct you to do so.
- Do not carry the wireless device in the upper pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.

Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

Taking Care of Your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:

- Keep the device dry. If your device gets wet, remove the battery without turning on the device, wipe it with a dry cloth, and take it to the service center.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not attempt to open the device other than as instructed in this guide. Repairing the phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations

- Please put the battery in a well-ventilated place out of direct sunlight. Charge the battery at room temperature range.
- If the time span of the battery after charging becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Use manufacturer approved batteries, chargers, accessories, and supplies. Micromax will not be responsible for user's safety when using unapproved batteries or accessories.



Recycle Your Phone



The WEEE logo appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified

collection point for recycling. of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment.

Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Micromax keeps the right to make modifications to any of the content in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such a case, the latter shall govern.

Copyrights

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.

www.micromaxinfo.com